


## IMPORTANT INFORMATION REGARDING YOUR GPR Plus PIT TAG READER

Biomark has identified a potential issue with the Global Pocket Reader Plus (GPR+), which could occur if batteries are installed incorrectly with reversed polarity, and the unit is then plugged in to charge. Please follow the instructions carefully for proper installation of batteries. Below is a diagram indicating the correct polarity of all 6 batteries inside the battery compartment.

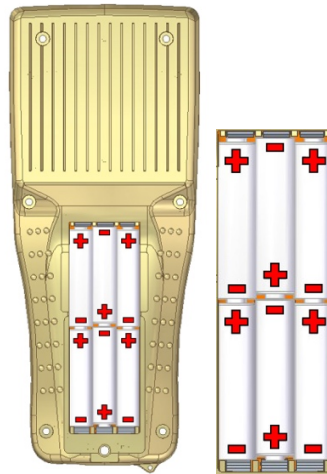

Once batteries are installed correctly, there are no concerns with the reader and it can be used normally.

If you prefer to use standard alkaline batteries, ensure the batteries are installed correctly for functionality. Do not attempt to charge the unit if you have installed alkaline batteries.

If you have any questions regarding correct installation of batteries, please contact our Customer Service Team:

E-mail: [customerservice@biomark.com](mailto:customerservice@biomark.com)

Customer Service: +1 (208) 275-0011

Thank you for your support.